

VEHICLE INSPECTION CHECK LIST

IMPORTANT NOTE BEFORE YOU START –

- No smoking while performing the following checks
- Make sure your car is on level ground
- The engine needs to be cool. If you have just been driving, wait about 10 minutes.
- B & R Brakes can assist you to rectify any thing you might find wrong during this check



CHECK OIL

1. Remove the dipstick
2. Wipe it clean with a lint free cloth
3. Re-insert the dip stick then remove it immediately
4. Read the oil level at the base of the dipstick.
5. If it is at the low end, B & R BRAKES – Castle Hill can top it up with the grade of oil specified in your owner's manual



CHECK COOLANT (Engine MUST be cool)

1. Check the coolant level in the plastic reservoir
2. Check the coolant level in the radiator.
3. If either level is low, B & R BRAKES – Castle Hill can top it up with the correct coolant specified in your owners manual

CHECK BATTERY

Some Batteries are sealed and do not require checking.

1. If your car battery has removable inspection caps, unscrew them and check that the fluid is about 5mm above the plates (or between the levels indicated on the battery).
2. If the level is low, B & R BRAKES – Castle Hill can top up it up distilled water
3. Keep the terminals and connections clean



Unit 4D / 2A Victoria Ave,
Castle Hill, NSW 2154
Tel (02) 9899 9668

Opening Hours
Mon to Fri from 8am to 4.30pm
Sat from 8am to 12pm

WIPERS

1. Use your washer jet to confirm your wipers are working
2. Inspect the quality of the wipe. Be sure you have a clean windscreen to prevent any faulty reading.
3. If your blades are beginning to perish, replace them.
4. B & R Brakes- Castle hill can supply and fit new wiper blades for you!

WASHER FLUID

1. Fill your washer fluid with clean water and add the recommended level of windscreen washer additive.
2. Don't use house hold detergents as they can damage your wiper blades and paint work

TYRES

1. Check all of your tyre pressures (including the spare) with a tyre pressure gauge
2. The pressure quoted in your owner's manual is the minimum pressure. A placard with the minimum tyre pressure is sometimes located on the driver's door or petrol flap).
3. Visually inspect the tread and side walls for bulges, abrasions, cuts and unusual wear
4. If you notice any thing of concern. Let the team at B & R Brakes help you!



LIGHTS

You will need someone to help you with this check.

1. Test the
 - i. headlights on low and high beam
 - ii. parking lights
 - iii. right and left blinker
 - iv. hazard lights
 - v. Reverse lights
2. Any lights not working? B & R Brakes can supply and fit new globes for you!



Unit 4D / 2A Victoria Ave,
Castle Hill, NSW 2154
Tel (02) 9899 9668

Opening Hours
Mon to Fri from 8am to 4.30pm
Sat from 8am to 12pm